


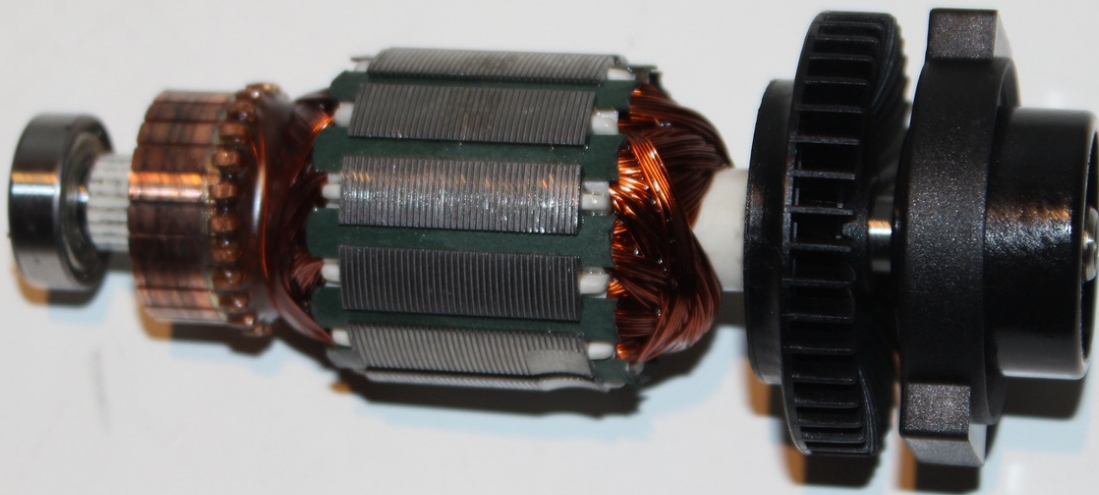

Black and Decker BDEDMT Motor Replacement

In this guide, we explain how to replace the motor of a Black and Decker BDEDMT.

Written By: Tyler Yurina



INTRODUCTION

If your device has a faulty motor this is the guide for you. This guide is not very challenging. You may need this guide if your motor has a faulty piece, bad wiring, or failed gears. Replacing the motor can be taken care of in six simple steps.



TOOLS:

- [64 Bit Driver Kit](#) (1)
-

Step 1 — Detach Matrix Attachment



 Remember to disconnect the device from all external power sources.


- To detach the matrix attachment piece, press down on the attachment release button located at the top of the device.
- Leaving your finger pressed down on the button, simply pull on the attachment to release it.

Step 2 — Remove Mounting Hardware





- Using your PH000 screwdriver with attachment J1 , unscrew seven 19mm outer screws located on the armature.
- Using the same screwdriver, unscrew the 12mm outer screw located on the armature.

Step 3 — Motor

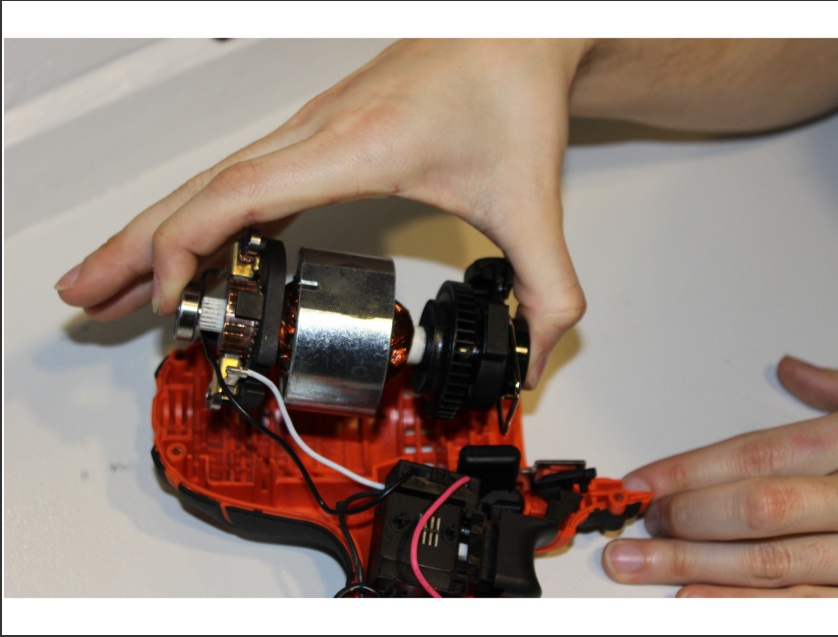

- Gently pull up the motor and other components at the top of the device except the handle.
- ⚠ Watch out for the wires. They are connected to two compressed magnets in the black framework.

Step 4

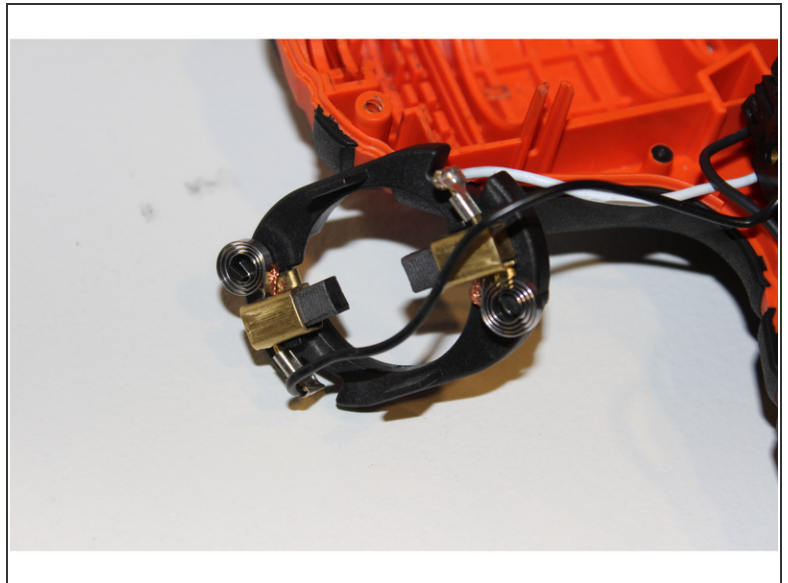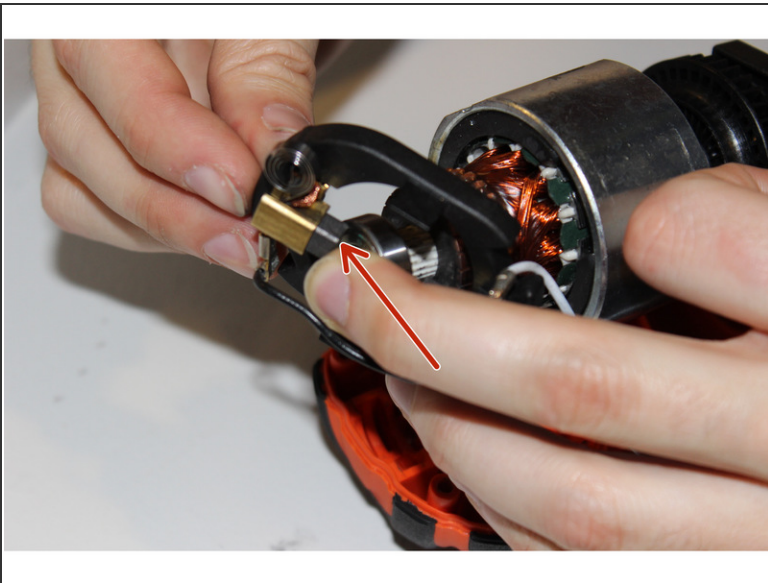


- Slide off the the black framework on the barring side.
- ⓘ You may have to compress the magnets in order to slide the framwork off of the barring.

Step 5



- Remove the release button attached at the front of the motor.

 It may have already come off during Step 3.

Step 6



- Work the silver magnetic ring off of the motor through the barring end.
- The motor is now free.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-07 05:24:33 PM.